 


No film output on this page

Thomson Consumer Electronics
10330 N. Meridian St.
Indianapolis, IN 46290
©2000 Thomson Consumer Electronics, Inc.
Trademark(s) © Registered
Marca(s) © Registrada(s)
55077250 Rev. 0 (EN/F/E)

RCA

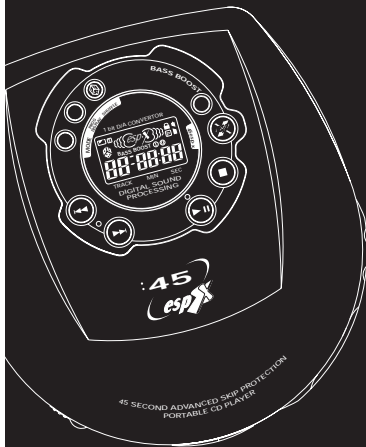

u
s
e
r
m
a
n
u
a
l

RP2365RC

FCC Information

EN

RCA Information

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

This equipment has been type tested and found to comply with the specifications in Subpart J of Part 15 of FCC Rules. These rules are designed to provide reasonable protection against radio and television interference in a residential installation. However, there is no guarantee that interference will not occur in particular installations.

If this equipment does cause interference to radio or television reception (which you can determine by turning the equipment off and on), try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No. RP2365RC

Date of Purchase

Place of Purchase

Serial No.

Service Information

 
This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

CAUTION!

Have a Blast- Just Not in Your Eardrums
Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone are in place.



The CD Player & Remote Control

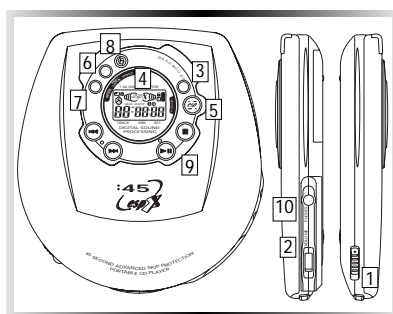


5. ESPX To avoid sound interruptions when impacts or vibrations occur.

1. To lock or unlock the buttons
2. To adjust the volume
3. Press to adjust the Bass Boost level
4. The display, more information on page 6
6. To program & display.
7. To repeat or scan.
8. For random playback
9. PLAY button. Press to play CD.
10. Headphones jack/ audio line out.

EN

Your player is equipped with a wire control which enables you to control the unit conveniently without pressing any buttons on CD player every time:

 1. CONTROL SWITCH. To switch between different functions of the player. When the player is in hold position, all buttons will be locked. Pressing any buttons will not trigger any function.
2. VOLUME. Volume control at the CD player determines the volume adjustable range at remote control.
3. PLAY/PAUSE. Press to play and temporarily stop the CD.
4. STOP. Press to stop CD playback.
5. SKIP FORWARD. Press to play the next track.

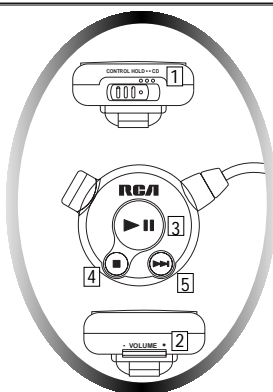

Main Power Supply

EN

Model Number	Adaptor	Batteries
RP 2365RC	5-4079A (120V 60Hz)	AAx2 (Not included)

AC/ DC Power Adapter

You can power your CD player with the supplied AC/DC adapter. AC/DC adapter is for indoor use in dry places only. Remove the jack from the device to use it with the batteries.

Note : Power is fed to the unit even when it is not functioning. To cut the power supply off, the AC/DC adaptor must be unplugged.

Batteries Power Supply

Refer to the table above for details of the batteries required to operate your unit.



Car (DC) Power Supply Adapter

 
Plug the car (DC) power supply adapter into the DC in 4,5V jack at the rear side of the CD player & then into the cigarette lighter receptacle in your car.

The CD Player

Listening to a Compact Disc

1. Slide the **(OPEN)** button to the right to open the door. Insert a disc and press lightly on the disc centre to secure disc loading. Close the door. Press **PLAY** and **RD DISC** will appear on the display and then the total number of tracks and time of the CD. If the disc compartment is empty or the disc cannot be played, **NO DISC** will appear on the display.
2. Press **HOLD** to lock the buttons to avoid accidental activation of unwanted functions

You can also change track or quickly listen to a part of a track by pressing or keep pressing  or 

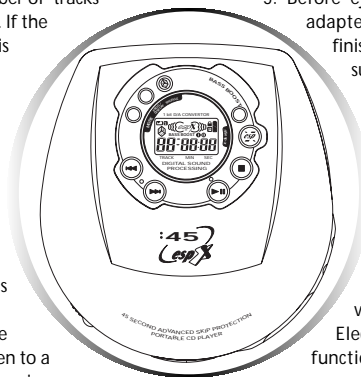

3. Insert a compact disc and press **PLAY**. Adjust CD player's volume to a mid level (make sure the Bass Boost is turned off).
4. Use the car stereo to adjust volume, tone etc. Adjust the volume of your CD player for better volume control.
5. Before ejecting the cassette adapter when you have finished listening, make sure the car stereo's volume is turned down.

The **ELECTRONIC SHOCK PROTECTION*** system prevents sound interruptions when impacts or vibrations occur.

Electronic anti-shock function consumes less power and hence lengthens the battery life. Therefore, the **ESPX** function is always turned on.

Listening to a CD in your car

1. Select a power source (either battery power or the car DC adaptor)
2. Insert the cassette adapter into the tape deck and plug the cord into the CD player's **PHONES** jack of the unit.



After many successive impacts, the buffer might be emptied causing a brief sound interruption for the memory to reload. The buffer is 45 seconds long.

EN

The CD Player

EN

SmartResume

When you stop CD play or power off the unit (without disconnecting power supply), SmartResume is automatically activated. It stores all the current settings and modes: current track, Shuffle, time display, Mode (Repeat/Repeat All/Program), and ESPX. When play mode is on again, the unit RESUMES (without changes) to the settings stored and plays from the beginning of the track.

If CD compartment lid is opened, then SmartResume stores only the following modes: Shuffle Mode (Repeat/Repeat All), and ESPX. Other settings such as track play, time display, program setting and memory are all reset or cancelled.

Repeating


You can replay the entire CD or one track as many times as you wish as well as listen to the beginning of each track for 10 seconds.

Press **MODE** repeatedly to

1. Replay the entire CD.
2. Replay the current track
3. Replay the beginning of each track for 10 seconds (The track number being played will be displayed and **SCAN** will appear on display)
4. Press again to de-select the function.

Program


This function lets you listen to the tracks you have selected in the order you want. The CD player must be in Stop mode for programming.

1. Press **PROG. P** will appear in the display.
2. Select the track to be stored by pressing  or  & then press **PROG** again to confirm.
3. Repeat step 2 for further programming.
4. Press **PLAY** button to listen to your program.

Note : To prevent excessive battery consumption, the unit switches off automatically after 30s if no key has been activated. During programming, the unit will also switch off if you do not press any key within 30s. If this happens, the program will be stored in memory. Turn the unit on again to resume programming.

You can program up to 24 tracks. To play your program again, press **PLAY**.

To add/cancel tracks to/from the program, go to stop mode, press and hold **PROG** button and refer to step 2 of the above.

To check the program, press **PLAY** and then 

The CD Player


To cancel your program, press and hold the **MODE** key in the stop mode. **ERASE** will appear on the display. The program will be canceled automatically.

To exit program mode, **P** will disappear from the display by pressing **STOP** and then **PROG**.

Random Play (SHUFFLE)

1. Press **PLAY** for listening.

2. Press  key.

Press  for de-selection.

Pause

To suspend playback, press **PLAY** during play mode. The minutes and seconds flash when playback is interrupted

Stop

To stop playback, press **STOP**.

The player switches off automatically after 10 seconds or press **STOP** key twice to switch off your CD player.

Remaining Time

Display shows remaining track time during play mode.

The Display

1. Repeating entire disc

2. Repeating current track

3. Random Play

 
4. **ESPX** (When the buffer is being loaded, the brackets around the **ESP** symbol will increase)

5. Program mode is active.

6. Buttons are locked.

7. Battery power levels.

8. Bass Boost is activated.

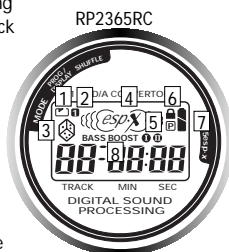

EN

More Information

EN

More Information

USEFUL ADVICE

- Do not store CDs in damp areas.
- Do not expose CDs to high temperatures.
- Do not put any tape or adhesives on either side of the disc.
- You should avoid leaving the CD door open. Dust is liable to impair performance of the laser optical unit.
- Do not use your set immediately after transport from a cold place to a warm place : there may be condensation problems.
- Do not touch the playing surface. Make sure that you keep your set away from water and high temperatures.
- If you do not use your set on battery power for more than one month, we advise you to take out all the batteries.
- To prevent personal injury, do not reverse any battery and do not mix battery types.
- Discard leaking batteries immediately. Leaking batteries can cause skin burns or other personal injury.
- Thomson recommends Duracell Ultra Batteries.
- Prolonged use of the CD player at full volume can damage the user's ear.

Please Respect the Environment !

Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

Maintenance

Clean the player with a soft cloth, or a damp chamois leather. Never use solvents.

Technical Specifications

- **Frequency response: 20Hz to 20kHz**

Power Supply

- 4.5V DC (through AD/DC adaptor (refer to table page 2 for details))
- 2 AA batteries (Duracell Ultra recommended)
- 4.5VDC (through car DC adapter)

US Warranty

EN

What your warranty covers:

- Any defect in materials or workmanship.

For how long after your purchase:

- One year (The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

What we will do:

- Provide you with a new, or at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

**Thomson Consumer Electronics, Inc.
Product Exchange Center
11721 B Alameda Ave
Socorro, TX 79927**

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment in case of loss of damage. Thomson accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you prepaid freight.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

Canadian Warranty

EN

Thomson Consumer Electronics Canada, Inc. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.

This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries.

Should your product not perform properly during the warranty period, either:

1. Return it to the selling dealer with proof of purchase for replacement,

OR

2. Remove the batteries (where applicable), and pack product complete with accessories in the original carton (or equivalent).

— Mail prepaid (with proof of purchase) and insured to:

Thomson Consumer Electronics Canada, Inc.

6200 Edwards Blvd.

Mississauga, Ontario

L5T 2V7

Canada

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Consumer Electronics Canada, Inc.

P.O. Box 0944

Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE

NAME OF STORE

Model Number:

RP2365RC